

PP7100 Jumper Setting

This document is for Software Switch Utility, not for DIP switch.

※ SOFTWARE SWITCH 1 :

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	115200
ON	OFF	38400
OFF	ON	19200
ON	ON	9600
3		Reserve
OFF		Reserve
ON		Reserve
4		Cut paper
OFF		Disabled
ON		Enabled
5		Beeper
OFF		Disabled
ON		Enabled
6		Cash Drawer
OFF		Disabled
ON		Enabled
7	8	Paper width
OFF	OFF	Paper Width = 80mm, Printable width = 512dots
ON	OFF	Paper Width = 80mm, Printable width = 576dots
OFF	ON	Paper Width = 58mm, Printable width = 336dots
ON	ON	Paper Width = 58mm, Printable width = 424dots

※ **SOFTWARE SWITCH 2 :**

SWITCH 2	FUNCTION
1	Density
OFF	Dark
ON	Normal
2	Printer PID
OFF	PP8800
ON	PP7100
3	Printer USB
OFF	VCOM
ON	Printer Class
4	Reserve
OFF	Reserve
ON	Reserve
5	Reserve
OFF	Reserve
ON	Reserve
6	Reserve
OFF	Reserve
ON	Reserve
7	Reserve
OFF	Reserve
ON	Reserve
8	Reserve
OFF	Reserve
ON	Reserve