

SD200 JUMPER SETTING

The default status of JP1 for normal ISO reader delivery is: pin pairs 1-2, 3-4 and 5-6 short while all the rest kept open.

JP1	1-2	3-4	5-6	7-8	9-10	11-12
Function	Track 1	Track 2	Track 3	MSR Type	Reserved	Leading / Stop Code
Opened	Disabled	Disabled	Disabled	ISO	N. A.	Enabled
Closed	Enabled	Enabled	Enabled	JIS2	Default	Disabled

The default status of JP2 for normal USB HUB is closed the setting as below:

JP2	1-2	3-4	5-6	7-8
Function	ALT-Num	NumLock	BaudRate	OS
Opened	Enable	Enable	19200	Linux
Closed	Disable	Disable	9600	Windows

