

KS-7417 JUMPER SETTING

- **JP1 : LVDS Voltage Selection**
Pin 1-2 Short : 3.3V
Pin 2-3 Short : 5V
- **JP8 : Panel configuration 1 Selection**
Pin 1-2 Short : Dual LVDS
Pin 2-3 Short : Single LVDS
- **JP9 : Panel configuration 2 Selection**
Pin 1-2 Short : 18 bpp
Pin 2-3 Short : 24 bpp VESA
All Open : 24 bpp JEIDA
- **JP8 、JP9 、SW1-8 : Panel Type Select**
JP8 Pin 1-2 Short 、JP9 Pin2-3 Short 、SW1-Pin8 ON : For 17" AUO G170ETN01
- **JP4 : COM1/COM2 PORT DC SUPPLY SELECT**
Pin 1-3 Short : COM1 Pin1 connected as 12V DC
Pin 3-5 Short : COM1 Pin1 connected as DCD
Pin 2-4 Short : COM2 Pin1 connected as 12V DC
Pin 4-6 Short : COM2 Pin1 connected as DCD
- **JP5 : COM3/COM4 PORT DC SUPPLY SELECT**
Pin 1-3 Short : COM3 Pin1 connected as 12V DC
Pin 3-5 Short : COM3 Pin1 connected as DCD
Pin 2-4 Short : COM4 Pin1 connected as 12V DC
Pin 4-6 Short : COM4 Pin1 connected as DCD
- **JP6 : For CR open/close status port selection**
Pin 1-3 、2-4 Short: For COM1
Pin 3-5 、4-6 Short : For COM5
- **JP7: LVDS Input 6 Bits/8 Bits Selection**
Pin 1-2 Short : 6 Bits LVDS Input
Pin 2-3 Short : 8 Bits LVDS Input
- **CR_PWR2 : CR 12V/24V Select**
Pin 3-4 Short : FOR CR 12V
Pin All Open :FOR CR 24V(W/CR24V-ADPAPTER CARD)

• **COM1~COM6 : +5V through BIOS ; VGA +12V through BIOS**

Press ESC to access Advanced/Miscellaneous Configuration

VGA DSUB 12V : Disabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled

COM4 DB9 5V : Disabled

• **DIP SWITCH1 (SW1) :**

SWITCH 1		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS (Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or ABON Touch Panel
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE(Default)
6	ON	Disable On Board USB Touch (for IR Touch)
	OFF	Enable On Board USB Touch
7	ON	Reserved
	OFF	Reserved
8	ON	For 17" AUO G170ETN01
	OFF	Reserved

