

KS-7215 JUMPER SETTING

- **JP2: USB TOUCH SPEAKER VOLUME**
Pin 1-2 Short : Volume is Fixed (Default)
Pin 2-3 Short : Volume is Programmable
- **JP3: EUP/WAKE ON OPTION**
OPEN: To support EUP But no support LAN/Alarm/modem wake up & power fail after power on function
Short : Disable EUP support but support LAN/Alarm/modem wake up & power fail after power on function (Default)
- **JP4: BACK LIGHT CONTROL**
Pin 1-2 Short : Back-Lighted SW Function (Default)
Pin 2-3 Short : Volume Up / Down SW Function
- **JP6 : COM1/COM2 DC SUPPLY SELECT**
Pin 1-3 Short : COM1 support 5V function
Pin 3-5 Short : COM1 Pin9 connected as RI
Pin 2-4 Short : COM2 support 5V function
Pin 4-6 Short : COM2 Pin9 connected as RI
- **JP7 : COM1/COM2 DC SUPPLY SELECT**
Pin 1-3 Short : COM1 Pin1 connected as 12V DC
Pin 3-5 Short : COM1 Pin1 connected as DCD
Pin 2-4 Short : COM2 Pin1 connected as 12V DC
Pin 4-6 Short : COM2 Pin1 connected as DCD
- **JP8 : COM3/COM4 DC SUPPLY SELECT**
Pin 1-3 Short : COM3 Pin1 connected as 12V DC
Pin 3-5 Short : COM3 Pin1 connected as DCD
Pin 2-4 Short : COM4 Pin1 connected as 12V DC
Pin 4-6 Short : COM4 Pin1 connected as DCD
- **JP9 : COM3/COM4 DC SUPPLY SELECT**
Pin 1-3 Short : COM3 support 5V function
Pin 3-5 Short : COM3 Pin9 connected as RI
Pin 2-4 Short : COM4 support 5V function
Pin 4-6 Short : COM4 Pin9 connected as RI
- **JP11: USB TOUCH SPEAKER VOLUME**
Pin 1-2 Short : Reserved
Pin 2-3 Short : for Optical/IR hardware touch beep function (Default)
- **JP100: LCD PANEL POWER SELECT**
Pin 1-2 Short : 3V for 15" LCD Panel
Pin 2-3 Short : 5V for 17" LCD Panel

※ DIP SWITCH3:

SWITCH 3		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS(Win98, Win2k, WinXP) (Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or OEM Touch Panel (Default)
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE (Default)
6	ON	Disable On Board USB Touch
	OFF	Enable On Board USB Touch (Default)
7	ON	Raid Reset
	OFF	Raid Normal (Default)
8	ON	Com4 Disable
	OFF	Com4 Normal (Default)

