

KS-7410/KS-7412 JUMPER SETTING

- **JP1 : Audio Volume Select**
Pin 1-2 Short : Load Volume default
Pin 2-3 Short : Audio Volume is adjustable
- **JP2 : Hand Set Function**
Pin 1-2 Short : Close is not use HANDSET Function
Pin 2-3 Short : Open is use HANDSET Function
- **JP3: Touch Select**
Pin 1-2 Short : PC Touch
Pin 2-3 Short : RESISTOR TOUCH
- **JP4 : For CR open/close status port selection**
Pin 1-3 、 2-4 Short: For COM1
Pin 3-5 、 4-6 Short : For COM5
- **JP5 : COM2/3 PORT DC SUPPLY SELECT**
Pin 1-3 Short : COM2 Pin1 connected as 12V DC
Pin 3-5 Short : COM2 Pin1 connected as DCD
Pin 2-4 Short : COM3 Pin1 connected as 12V DC
Pin 4-6 Short : COM3 Pin1 connected as DCD
- **JP5 : JP 6 COM1 PORT DC SUPPLY SELECT**
Pin 1-2 Short : COM1 Pin1 connected as 12V DC
Pin 2-3 Short : COM1 Pin1 connected as DCD
- **JP7 : Hot Key Adjust**
Pin 1-2 Short : Fix Hot Key Volume
Pin 2-3 Short : Hot Key Volume is adjustable
- **JP8 : COM4 PORT DC SUPPLY SELECT**
Pin 1-2 Short : COM4 Pin1 connected as 12V DC
Pin 2-3 Short : COM4 Pin1 connected as DCD
- **JCMOS1 : CMOS DATA CONTROL**
Pin 1-2 Short: Normal
Pin 2-3 Short : clear CMOS
- **CR_PWR2 : CR 12V/24V Select**
Pin 3-4 Short : FOR CR 12V
Pin All Open :FOR CR 24V(W/CR24V-ADPAPTER CARD)
- **COM1~COM4 : +5V through BIOS ; VGA +12V through BIOS**
Press ESC to access Advanced/Miscellaneous Configuration
VGA DSUB 12V : Disabled
COM1 DB9 5V : Disabled
COM2 DB9 5V : Disabled
COM3 DB9 5V : Disabled
COM4 DB9 5V : Disabled

