

## XP-3300 Series Printer Jumper Setting

- DIP SWITCH 1:

SWITCH 1		FUNCTION
1 OFF	2 OFF	Baud Rate: 19200
<b>1 OFF</b>	<b>2ON</b>	<b>Baud Rate: 115200</b>
1 ON	2 OFF	Baud Rate: 9600
1 ON	2ON	Baud Rate: 38400
<b>3</b>	OFF	Don't cut paper when cover closed.
	<b>ON</b>	<b>Cut Paper When cover closed.</b>
<b>4</b>	OFF	Partial cut paper.
	<b>ON</b>	<b>Full cut paper.</b>
<b>5</b>	<b>OFF</b>	<b>Busy when buffer full &amp; off line</b>
	ON	Busy when buffer full
<b>6</b>	<b>OFF</b>	<b>Paper Cut with auto paper feed.</b>
	ON	Immediately cut
<b>7</b>	<b>OFF</b>	<b>Fixed to OFF -- With Auto Cutter.</b>
<b>8</b>	<b>OFF</b>	<b>Paper Feed Backward before print = Enabled</b>
	ON	Paper Feed Backward before print = Disabled

● SOFTWARE SWITCH 2:

SWITCH 2		FUNCTION
1	OFF	<b>Set Hardware Switch 1 Valid</b>
	ON	Set Hardware Switch 1 Invalid (Software switch 1 will valid instead of hardware switch 1)
2	OFF	<b>80mm</b>
	ON	58mm
3	OFF	<b>512dots</b>
	ON	576dots
4	OFF	<b>Print Density = NORMAL</b>
	ON	Print Density =HIGH QUALITY
5	OFF	Raster bitmap print mode = Buffer batch
	ON	<b>Raster bitmap print mode = Line print</b>
6	OFF	<b>Parity check = NONE</b>
	ON	Parity check = EVEN
7	OFF	<b>Handshaking = DTR/DSR</b>
	ON	Handshaking = XON/XOFF
8	OFF	<b>&lt;CR&gt; Invalid</b>
	ON	<CR> Valid

※ J4: Use for Firmware download. (必須插單腳)

J4	FUNCTION
Open	Normal Mode
Short	Firmware download mode

※ J9:(必須插單腳)

J	FUNCTION
Open	For XP3000E Ver.E (Default)
Short	For XP2000 M/B

※ J10 :

J10	FUNCTION
1-2 Shrot	For XP2000 M/B
2-3 Short	For XP3000E Ver.E (Default)