

DS-210/310 Series Printer Jumper Setting

- DIP SWITCH 1:

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	
OFF	ON	
ON	OFF	
ON	ON	
3		Printable width
OFF		512dots
ON		576dots
4		Paper width
OFF		80mm
ON		58mm
5		Print Speed
OFF		170mm/s
ON		200mm/s
6		Interface
OFF		DEFAULT
ON		USB
7		Auto cutter
OFF		Enable
ON		Disable
8		
OFF		
ON		

※ USB CDC Setting : S1→1、2、6 ON

● SOFTWARE SWITCH 2:

SWITCH 2	FUNCTION
1	Paper Feed Back
OFF	Enable
ON	Disable
2	Cut Paper after Cover Return
OFF	Enable
ON	Disable
3	Full Cut Paper
OFF	Enable
ON	Disable
4	Before Cut Paper
OFF	Normal Cut
ON	Cut and without paper feed
5	Busy condition
OFF	Enable
ON	Disable
6	< CR > Auto Line Feed
OFF	Disable
ON	Enable
7	Parity Check
OFF	NONE
ON	EVEN
8	Handshaking
OFF	DTR/DSR
ON	XON/XOFF

● SOFTWARE SWITCH 3:

SWITCH 3				FUNCTION
1				Raster Bitmap Printing
OFF				Batch Print
ON				Line Print
2				High Quality Print (120 mm/s)
OFF				Disable
ON				Enable
3				Thai Font mode
OFF				1 PASS
ON				3 PASS
4				UPOS Write
OFF				Disable
ON				Enable
5	6	7	8	Print Density
OFF	OFF	OFF	OFF	100%
ON	OFF	OFF	OFF	105%
OFF	ON	OFF	OFF	110%
ON	ON	OFF	OFF	115%
OFF	OFF	ON	OFF	120%
ON	OFF	ON	OFF	125%
OFF	ON	ON	OFF	130%
ON	ON	ON	OFF	95%
OFF	OFF	OFF	ON	90%
ON	OFF	OFF	ON	85%
OFF	ON	OFF	ON	80%

● SOFTWARE SWITCH 4:

SWITCH 4		FUNCTION
1		Beep Sound after Cut paper
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Switch 1 Selection
OFF		Hardware
ON		Software