

## PS-331x/PS-341x JUMPER SETTING

- **JP1 : Touch Type Select**  
Pin 1-3 、 2-4 Short: Resistor Touch with PS-640 daughter Card & disable JUSB1 (for PS-331x)  
Pin 3-5 、 4-6 Short : PC Touch or IR Touch without PS-640 & Enable JUSB1 (for PS-341x)
- **JP2 : For CR open/close status port selection**  
Pin 1-3 、 2-4 Short: For COM1  
Pin 3-5 、 4-6 Short : For COM5
- **JP3 : LCD Power Select**  
Pin 1-2 Short: VCC3  
Pin 2-3 Short: VCC5
- **JP4 : CMOS DATA CONTROL**  
Pin 1-2 Short: Default  
Pin 2-3 Short: Clear CMOS
- **JP5 : COM3/COM4 Pin1 connected Setting**  
Pin 1-3 Short : COM3 Pin1 connected to 12V  
Pin 3-5 Short : COM3 Pin1 connected to DCD  
Pin 2-4 Short : COM4 Pin1 connected to 12V  
Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JP6 : COM3/COM4 DC SUPPLY SELECT**  
Pin 1-3 Short : COM3 Pin9 connected to 5 V DC  
Pin 3-5 Short : COM3 Pin9 connected as RI  
Pin 2-4 Short : COM4 Pin9 connected to 5 V DC  
Pin 4-6 Short : COM4 Pin9 connected as RI
- **JP7 : COM1/COM2 Pin1 connected Setting**  
Pin 1-3 Short : COM1 Pin1 connected to 12V  
Pin 3-5 Short : COM1 Pin1 connected to DCD  
Pin 2-4 Short : COM2 Pin1 connected to 12V  
Pin 4-6 Short : COM2 Pin1 connected to DCD
- **JP8 : COM1/COM2 DC SUPPLY SELECT**  
Pin 1-3 Short : COM1 Pin9 connected to 5 V DC  
Pin 3-5 Short : COM1 Pin9 connected as RI  
Pin 2-4 Short : COM2 Pin9 connected to 5 V DC  
Pin 4-6 Short : COM2 Pin9 connected as RI
- **JP9 : 12V DC SUPPLY SELECT FOR CRT**  
Open VGA DSUB Pin 9 =Not Connect  
Close : VGA DSUB Pin 9 =12V

