

## PS-351x/PS-361x JUMPER SETTING

- **JP2 : Select Resistor /P-CAP Touch**

Pin 1-3 、 2-4 Short: Resistor Touch with PS-640 daughter Card

Pin 3-5 、 4-6 Short : PC Touch or IR Touch without PS-640

- **JP3 : Select Resistor /P-CAP Touch**

Pin 1-2 Short: For Resistor Touch

Pin 2-3 Short: For P-CAP Touch

- **JCMOS1 : CMOS DATA CONTROL**

DIP	Switch select	
1 & 2	1: ON, 2: ON	Clear CMOS
	1: OFF, 2: OFF	Normal Operation

- **JP4 : For CR open/close status port selection**

Pin 1-3 、 2-4 Short: For COM1

Pin 3-5 、 4-6 Short : For COM5

- **JP5 : COM3/COM4 Pin1 connected Setting**

Pin 1-3 Short : COM3 Pin1 connected to 12V

Pin 3-5 Short : COM3 Pin1 connected to DCD

Pin 2-4 Short : COM4 Pin1 connected to 12V

Pin 4-6 Short : COM4 Pin1 connected to DCD

- **JP6 : COM1/COM2 Pin1 connected Setting**

Pin 1-3 Short : COM1 Pin1 connected to 12V

Pin 3-5 Short : COM1 Pin1 connected to DCD

Pin 2-4 Short : COM2 Pin1 connected to 12V

Pin 4-6 Short : COM2 Pin1 connected to DCD

- **COM1~COM4 +5V through BIOS ; VGA +12V through BIOS**

Press ESC to access Advanced/OEM IO Configuration

VGA DSUB 12V : Disabled

COM1 DB9 5V : Disabled COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled

COM4 DB9 5V : Disabled

