

HS-2300/2500 Series Printer Jumper Setting

- DIP SWITCH 1:

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	Reserve
OFF	ON	Reserve
ON	OFF	USB PRINTER CALSS
ON	ON	USB CDC
3		Cut Paper after Cover Return
OFF		Disable
ON		Enable
4		Full Cut Paper
OFF		Disable
ON		Enable
5		Busy condition
OFF		Enable
ON		Disable
6		Before Cut Paper
OFF		Normal Cut
ON		Cut and without paper feed
7		Auto cutter
OFF		Enable
ON		Disable
8		Reserve
OFF		Reserve
ON		Reserve

● SOFTWARE SWITCH 2:

SWITCH 2	FUNCTION
1	Software Switch Selection
OFF	Set Hardware Switch 1 Valid
ON	Set Hardware Switch 1 Invalid (Software switch 1 will valid instead of hardware switch 1)
2	Paper width
OFF	80mm
ON	58mm
3	Printable width
OFF	512dots
ON	576dots
4	Paper Feed Back
OFF	Enable
ON	Disable
5	Raster Bitmap Printing
OFF	Batch Print
ON	Line Print
6	Parity Check
OFF	NONE
ON	EVEN
7	Handshaking
OFF	DTR/DSR
ON	XON/XOFF
8	< CR > Auto Line Feed
OFF	Disable
ON	Enable

● SOFTWARE SWITCH 3:

SWITCH 3			FUNCTION
1			UPOS Write
OFF			Disable
ON			Enable
2			Beep Sound after Cut paper
OFF			Disable
ON			Enable
3	4	5	Print Density
OFF	OFF	OFF	100%
ON	OFF	OFF	110%
OFF	ON	OFF	120%
ON	ON	OFF	130%
6			Print Speed
OFF			170mm/s
ON			200mm/s
7			Thai Font mode
OFF			1 PASS
ON			3 PASS
8			Cover Open Message
OFF			Disable
ON			Enable

● SOFTWARE SWITCH 4:

SWITCH 4		FUNCTION
1		Print Speed 120mm/s
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Reserve
OFF		Reserve
ON		Reserve

※ JP4: Use for Firmware download.

JP4	FUNCTION
Open	Normal Mode
Short	Firmware download mode