

XT-6015/XT-6016 JUMPER SETTING

- **JCOM_SEL1 : COM1/COM2 PORT DC SUPPLY SELECT**

Pin 1-3 Short : COM1 Pin1 connected as 12V DC

Pin 3-5 Short : COM1 Pin1 connected as DCD

Pin 2-4 Short : COM2 Pin1 connected as 12V DC

Pin 4-6 Short : COM2 Pin1 connected as DCD

- **JCOM_SEL3 : COM3 PORT DC SUPPLY SELECT**

Pin 1-2 Short : COM3 Pin1 connected as 12V DC

Pin 2-3 Short : COM3 Pin1 connected as DCD

- **JCOM_SEL2 : COM1/COM2 PORT DC SUPPLY SELECT**

Pin 1-3 Short : COM1 Pin9 connected as 5V DC

Pin 3-5 Short : COM1 Pin9 connected as RI

Pin 2-4 Short : COM2 Pin9 connected as 5V DC

Pin 4-6 Short : COM2 Pin9 connected as RI

- **JCOM_SEL4 : COM3 PORT DC SUPPLY SELECT**

Pin 1-2 Short : COM3 Pin9 connected as 5V DC

Pin 2-3 Short : COM3 Pin9 connected as RI

- **JVGA_12V : VGA 12V DC SUPPLY SELECT FOR CRT**

Pin 1-2 Short : VGA DSUB Pin9=12V

Pin 2-3 Short : VGA DSUB Pin9= Not Connect

- **JCR_SEL1 : For CR open/close status port selection**

Pin 1-3 、 2-4 Short: For COM1

Pin 3-5 、 4-6 Short : For COM5

- **SW1 : Clear CMOS & Touch Panel OS Support Setting**

DIP	Switch select	
1 & 2	1: ON, 2: ON	Reserved
	1: ON, 2: OFF	Normal Operation
	1: OFF, 2: ON	Clear CMOS
	1: OFF, 2: OFF	Reserved
3	3: ON	Disable Flash Descriptor Security (override)
	3: OFF	Enable security measures defined in the Flash Descriptor

- **COM1~COM3 : +5V through BIOS ; VGA +12V through BIOS**

Press ESC to access Advanced/OEM IO Configuration

VGA DSUB 12V : Enabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled



JCOM SEL1

JCOM SEL3

JVGA 12V

JCOM_SEL2

JCOM SEL4