

XT-3815/XT-3915/XT-3915IR JUMPER SETTING

- **JP1 : Select LCD Power**

Pin 1-2 Short: VCC3

Pin 2-3 Short: VCC5

- **JP4 : COM1/COM2 Pin1 connected Setting**

Pin 1-3 Short : COM1 Pin1 connected to 12V

Pin 3-5 Short : COM1 Pin1 connected to DCD

Pin 2-4 Short : COM2 Pin1 connected to 12V

Pin 4-6 Short : COM2 Pin1 connected to DCD

- **JP5 : COM3/COM4 Pin1 connected Setting**

Pin 1-3 Short : COM3 Pin1 connected to 12V

Pin 3-5 Short : COM3 Pin1 connected to DCD

Pin 2-4 Short : COM4 Pin1 connected to 12V

Pin 4-6 Short : COM4 Pin1 connected to DCD

- **JP6 : For CR open/close status port selection**

Pin 1-3 、 2-4 Short: For COM1

Pin 3-5 、 4-6 Short : For COM5

- **COM1~COM6 : +5V through BIOS ; VGA +12V through BIOS**

Press ESC to access SCU\Advanced\Miscellaneous Configuration\

VGA DSUB 12V : Disabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled

COM3 DB9 5V : Disabled

COM4 DB9 5V : Disabled

COM5 DB9 5V : Disabled <OPTION>

COM6 DB9 5V : Disabled <OPTION>

- **DIP SWITCH1 (SW1) :**

SWITCH1		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS(Win98, Win2k, WinXP)(Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or ABON Touch Panel
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE(Default)
6	ON	Disable On Board USB Touch (for IR Touch)
	OFF	Enable On Board USB Touch
7	ON	Raid Reset
	OFF	Raid Normal
8	ON	Reserved
	OFF	Reserved

