

XT-3817 JUMPER SETTING

- **JP1 : Select LCD Power**
Pin 1-2 Short: VCC3
Pin 2-3 Short: VCC5
- **JP3 : COM1/COM2 Pin1 connected Setting**
Pin 1-3 Short : COM1 Pin1 connected to 12V
Pin 3-5 Short : COM1 Pin1 connected to DCD
Pin 2-4 Short : COM2 Pin1 connected to 12V
Pin 4-6 Short : COM2 Pin1 connected to DCD
- **JP4 : COM3/COM4 Pin1 connected Setting**
Pin 1-3 Short : COM3 Pin1 connected to 12V
Pin 3-5 Short : COM3 Pin1 connected to DCD
Pin 2-4 Short : COM4 Pin1 connected to 12V
Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JP2 : For CR open/close status port selection**
Pin 1-3 、 2-4 Short: For COM1
Pin 3-5 、 4-6 Short : For COM5
- **COM1~COM4 : +5V through BIOS ; VGA +12V through BIOS**
Press ESC to access SCU\Advanced\Miscellaneous Configuration\
VGA DSUB 12V : Disabled
COM1 DB9 5V : Disabled
COM2 DB9 5V : Disabled
COM3 DB9 5V : Disabled
COM4 DB9 5V : Disabled

- **DIP SWITCH1 (SW1) :**

SWITCH1		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS(Win98, Win2k, WinXP)(Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or ABON Touch Panel
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE(Default)
6	ON	Disable On Board USB Touch (for IR Touch)
	OFF	Enable On Board USB Touch
7	ON	Raid Reset
	OFF	Raid Normal
8	ON	Reserved
	OFF	Reserved

