

HC-1021 JUMPER SETTING

- **JP2 : COM1/COM2 PORT DC SUPPLY SELECT**
 - Pin 1-3 Short : COM1 Pin1 connected as 12V DC
 - Pin 3-5 Short : COM1 Pin1 connected as DCD
 - Pin 2-4 Short : COM2 Pin1 connected as 12V DC
 - Pin 4-6 Short : COM2 Pin1 connected as DCD
- **JP3 : COM3/COM4 PORT DC SUPPLY SELECT**
 - Pin 1-3 Short : COM3 Pin1 connected to 12V
 - Pin 3-5 Short : COM3 Pin1 connected to DCD
 - Pin 2-4 Short : COM4 Pin1 connected to 12V
 - Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JP4 : Handset HP/Mic Disable Select**
 - Pin 1-2 Short: No use handset Function
 - Pin 2-3 Short: Use Handset Function
- **JP5 : COM1/COM2 PORT DC SUPPLY SELECT**
 - Pin 1-3 Short : COM1 Pin9 connected as 5V DC (By BIOS or Jumper setting)
 - Pin 3-5 Short : COM1 Pin9 connected as RI
 - Pin 2-4 Short : COM2 Pin9 connected as 5V DC (By BIOS or Jumper setting)
 - Pin 4-6 Short : COM2 Pin9 connected as RI
- **JP6 : COM3/COM4 PORT DC SUPPLY SELECT**
 - Pin 1-3 Short : COM3 Pin9 connected as 5V DC (By BIOS or Jumper setting)
 - Pin 3-5 Short : COM3 Pin9 connected as RI
 - Pin 2-4 Short : COM4 Pin9 connected as 5V DC (By BIOS or Jumper setting)
 - Pin 4-6 Short : COM4 Pin9 connected as RI
- **JP7 : CMOS DATA CONTROL SELECT**
 - Pin 1-2 Short : Normal
 - Pin 2-3 Short + remove RTC Battery by 5 sec : Clear CMOS
- **COM1~COM4 : +5V through BIOS ; VGA +12V through BIOS**
 - Press ESC to access Advanced/Other Configuration
 - VGA DSUB 12V : Disabled
 - COM1 DB9 5V : Disabled
 - COM2 DB9 5V : Disabled
 - COM3 DB9 5V : Disabled
 - COM4 DB9 5V : Disabled

