

# PP7900W Jumper Setting

※ SOFTWARE SWITCH 1 :

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	115200
OFF	ON	19200
ON	OFF	9600
ON	ON	38400
3		USB Class
OFF		Printer Class
ON		Virtual COM
4	5	Onboard Interface
OFF	OFF	USB
OFF	ON	WIFI
ON	OFF	LAN
6		Margin (on Top)
OFF		11 mm
ON		14 mm
7		Printable width
OFF		512 dots
ON		576 dots
8		Paper width
OFF		80mm
ON		58mm

※ SOFTWARE SWITCH 2 :

SWITCH 2	FUNCTION
<b>1</b>	<b>Auto cutter</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>2</b>	<b>Cut Paper after Cover Return</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>3</b>	<b>Full Cut Paper</b>
<b>OFF</b>	<b>Disable</b>
ON	Enable
<b>4</b>	<b>Before Cut Paper</b>
<b>OFF</b>	<b>Normal Cut</b>
ON	Cut and without paper feed
<b>5</b>	<b>Busy condition</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>6</b>	<b>&lt; CR &gt; Auto Line Feed</b>
<b>OFF</b>	<b>Disable</b>
ON	Enable
<b>7</b>	<b>Parity Check</b>
<b>OFF</b>	<b>NONE</b>
ON	EVEN
<b>8</b>	<b>Handshaking</b>
<b>OFF</b>	<b>DTR/DSR</b>
ON	XON/XOFF

※ SOFTWARE SWITCH 3 :

SWITCH 3			FUNCTION
1			Raster Bitmap Printing
OFF			Batch Print
ON			Line Print
2	3		Print Speed
OFF	OFF		220mm/s
ON	OFF		200mm/s
OFF	ON		180mm/s
ON	ON		250mm/s
4			Thai Font mode
OFF			1 PASS
ON			3 PASS
5	6	7	Print Density
OFF	OFF	OFF	100%
ON	OFF	OFF	110%
OFF	ON	OFF	120%
ON	ON	OFF	130%
OFF	OFF	ON	90%
ON	OFF	ON	80%
OFF	ON	ON	70%
8			UPOS Write
OFF			Enable
ON			Disable

※ SOFTWARE SWITCH 4 :

SWITCH 4		FUNCTION
1		Beep Sound after Cut paper
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Usb packet
OFF		Zero packet
ON		NAK packet

## ※ SOFTWARE SWITCH 5 :

SWITCH 5	FUNCTION
1	The New Font For “V” and “0”
OFF	Use Original Font
ON	Use New Font
2	Reserve
OFF	
ON	
3	Reserve
OFF	
ON	
4	The Beep Sound For “Paper Near End”
OFF	Enable
ON	Disable
5	The Beep Sound For “Paper Out”
OFF	Enable
ON	Disable
6	Reserve
OFF	
ON	
7	Printing Speed
OFF	Auto (Adjust by Loading)
ON	Fixed
8	Reserve
OFF	
ON	

※ SOFTWARE SWITCH 6 :

SWITCH 6		FUNCTION
1		Reserve
OFF		
ON		
2		Reserve
OFF		
ON		
3	4	Paper Feed Back
OFF	OFF	Disable
ON	OFF	3mm
OFF	ON	5mm
ON	ON	8mm
5		Printer PID
OFF		Default
ON		FOR PP7600
6		Printer PID
OFF		Default
ON		FOR PP7600X
7		Printer PID
OFF		Default
ON		FOR HS3500
8		Reserve
OFF		
ON		