

## XP-3200 Series Printer Jumper Setting

● DIP SWITCH 1:

SWITCH 1		FUNCTION
1 OFF	2 OFF	Baud Rate: 19200
<b>1 OFF</b>	<b>2 ON</b>	<b>Baud Rate: 115200</b>
1 ON	2 OFF	Baud Rate: 9600
1 ON	2 ON	Baud Rate: 38400
<b>3</b>	OFF	Don't cut paper when cover closed.
	<b>ON</b>	<b>Cut Paper When cover closed.</b>
<b>4</b>	OFF	Partial cut paper.
	<b>ON</b>	<b>Full cut paper.</b>
<b>5</b>	<b>OFF</b>	<b>Busy when buffer full &amp; off line</b>
	ON	Busy when buffer full
<b>6</b>	<b>OFF</b>	Paper Cut with auto paper feed.
	ON	Immediately cut
<b>7</b>	OFF	With Auto Cutter.
	<b>ON</b>	<b>Without Auto Cutter</b>
<b>8</b>	<b>OFF</b>	<b>Paper Feed Backward before print = Enabled</b>
	ON	Paper Feed Backward before print = Disabled

## ● SOFTWARE SWITCH 2:

SWITCH 2		FUNCTION
1	OFF	Set Hardware Switch 1 Valid
	ON	Set Hardware Switch 1 Invalid ( Software switch 1 will valid instead of hardware switch 1 )
2	OFF	Fixed to OFF
3	OFF	Fixed to OFF
4	OFF	Fixed to OFF
5	OFF	Raster bitmap print mode = Buffer batch
	ON	Raster bitmap print mode = Line print
6	OFF	Parity check = NONE
	ON	Parity check = EVEN
7	OFF	Handshaking = DTR/DSR
	ON	Handshaking = XON/XOFF
8	OFF	<CR> Invalid
	ON	<CR> Valid

※ J3: Use for Firmware download.

J3	FUNCTION
Open	Normal Mode
Short	Firmware download mode