

KS-7517/KS-7717 JUMPER SETTING

- **JP1 : Select LCD Power**
Pin 1-2 Short : 3.3V
Pin 2-3 Short : 5V
- **JP2 : EUP/WAKE ON OPTION**
OPEN : To support EUP But no support LAN/Alarm/modem wake up & power fail after power on function
Short : Disable EUP support but support LAN/Alarm/modem wake up & power fail after power on function
- **JP3 : Touch Speaker Volume Select**
Pin 1-2 Short : Fixed
Pin 2-3 Short : Adjustable
- **JP6 : COM1/COM2 Pin1 connected Setting**
Pin 1-3 Short : COM1 Pin1 connected to 12V
Pin 3-5 Short : COM1 Pin1 connected to DCD
Pin 2-4 Short : COM2 Pin1 connected to 12V
Pin 4-6 Short : COM2 Pin1 connected to DCD
- **JP7 : COM3/COM4 Pin1 connected Setting**
Pin 1-3 Short : COM3 Pin1 connected to 12V
Pin 3-5 Short : COM3 Pin1 connected to DCD
Pin 2-4 Short : COM4 Pin1 connected to 12V
Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JP8 : DCD/Optical IR touch speaker select**
Pin 1-2 Short : DCD5
Pin 2-3 Short : Optical IR touch speaker (DEFAULT)
- **JP9 : For CR open/close status port selection (PCBA-F Add)**
Pin 1-3 、 2-4 Short : For COM1
Pin 3-5 、 4-6 Short : For COM5
- **JP10 : CCFL/LED Backlight Setup (PCBA-F Add)**
Pin 1-2 Short : CCFL Backlight Panel
Pin 2-3 Short : LED Backlight Panel
- **BLJP1 : Backlight ADJ Type Setup (PCBA-F Add)**
Pin 1-2 Short : For ANALOG
Pin 2-3 Short : For PWM
- **SEL68JP1 : LVDS Input 6 Bits/8 Bits Selection (PCBA-F Add)**
Pin 1-2 Short : 8 Bits LVDS Input
Pin 2-3 Short : 6 Bits LVDS Input

• **COM1~COM4 : +5V through BIOS ; VGA +12V through BIOS**

Press F2 to access Chipset\PCH-IO Configuration\

VGA DSUB 12V : Disabled

COM1 DB9 5V : Disabled

COM2 DB9 5V : Disabled


COM3 DB9 5V : Disabled

COM4 DB9 5V : Disabled

• **DIP SWITCH3 :**

SWITCH 3		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS (Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or ABON Touch Panel
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE(Default)
6	ON	Disable On Board USB Touch (for IR Touch)
	OFF	Enable On Board USB Touch
7	ON	Raid Reset
	OFF	Raid Normal
8	ON	COM4 Disable
	OFF	COM4 Normal

For PCBA-F and after version:

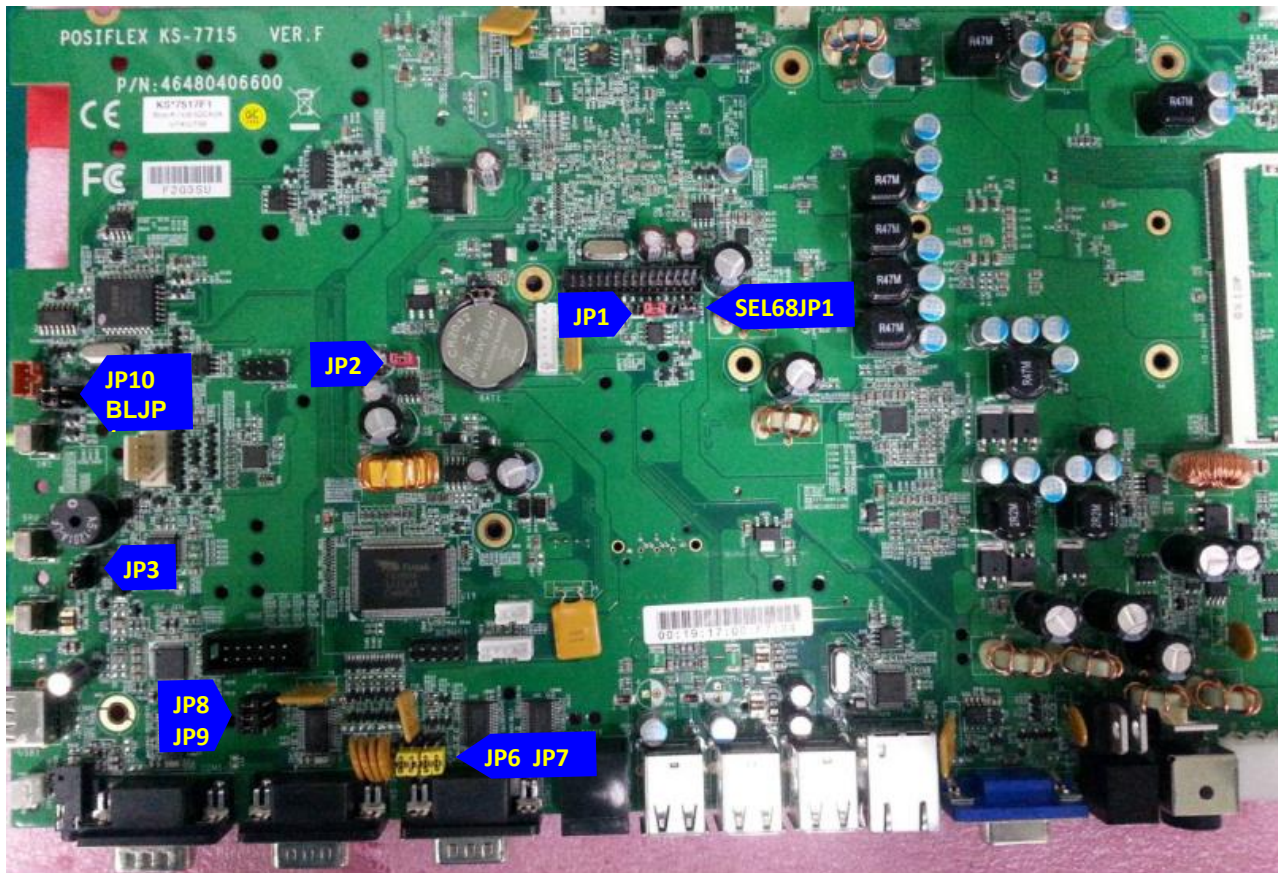

For PCBA-C and before version:

